




ES

REFRIGERADOR

Con Congelador Superior

MANUAL DE USUARIO



POR FAVOR LEA CON ATENCIÓN
ESTE MANUAL ANTES DE USAR EL
APARATO, PARA ASEGURAR UN
CORRECTO FUNCIONAMIENTO Y
GUÁRDELO PARA FUTURAS
CONSULTAS

versión:001

MODELO: MDRT294FGG01

www.midea.com

CONTENIDO

1.	ADVERTENCIAS DE SEGURIDAD.....	1
2.	INSTALACION	2
2.1	Ubicación.....	2
2.2	La inversión de la oscilación de las puertas	2
2.3	Requisitos de espacio en la puerta	6
2.4	Nivelación de la Unidad.....	6
2.5	Limpieza Antes de usar	6
2.6	Antes de usar la unidad.....	6
2.7	Accesorios Interior	7
3.	DESCRIPCIÓN GENERAL DEL PRODUCTO.....	8
4.	FUNCIONAMIENTO	8
4.1	Conectar su unidad	8
4.2	Ruido interior de la unidad !	9
4.3	Consejos para mantener los alimentos en la Unidad	9
4.4	Cambiar la bombilla	9
5.	LIMPIEZA.....	9
5.1	Descongelación	9
5.2	Limpieza del interior y el exterior de la unidad.....	9
5.3	Consejos de limpieza.....	10
6.	MANTENIMIENTO.....	10
6.1	Cambio de la luz interna.....	10
6.2	Cuidado al manipular / Moviendo su Unidad	10
6.3	Servicio	10
6.4	Conmutación De por largos períodos de tiempo	10
7.	Solución de problemas	10
7.1	Calor en las extremidades.....	11
8.	CONSEJOS PARA AHORRO DE ENERGÍA	11
9.	ELIMINACIÓN.....	12



1. ADVERTENCIAS DE SEGURIDAD

- 1) **ADVERTENCIA** - Mantenga las aberturas de ventilación , en el recinto del aparato o en el hueco para la estructura , sin obstáculos .
- 2) **ADVERTENCIA** - No utilice dispositivos mecánicos u otros medios para acelerar la descongelación con procedimientos, distintos de los recomendados por el fabricante.
- 3) **ADVERTENCIA** - No dañe el circuito de frío .
- 4) **ADVERTENCIA** - No utilizar aparatos eléctricos en el interior de los compartimentos de almacenamiento de alimentos del aparato , a menos que sean del tipo recomendado por el fabricante.
- 5) El aparato debe ser desconectado después del uso y antes de llevar a cabo el mantenimiento del usuario en el aparato.
- 6) Este aparato puede ser utilizado por niños de 8 años o más y personas con capacidad mental física y sensorial reducida o con falta de experiencia y conocimiento siempre que sean supervisados o instruidos a cerca del uso del aparato de una manera segura y entender los peligros involucrados. Los niños no deben de jugar con el aparato. La limpieza y mantenimiento no deben de hacerla los niños y menos sin su supervisión.
- 7) Si el cable de alimentación está dañado, debe ser reemplazado por el fabricante, su servicio técnico o personal cualificado, con el fin de evitar situaciones de peligro .
- 8) Por favor la eliminación de este producto se debe de hacer con las regulaciones locales para que se utilice el gas inflamable y el refrigerante.
- 9) Por favor, de acuerdo a las regulaciones locales relacionadas con la eliminación del equipo para el inflamable refrigerante y de soplado de gas . Antes de desechar el aparato, quite las puertas para evitar que algún niño pueda quedar atrapado.
- 10) Este aparato está diseñado para ser utilizado en el hogar y otras aplicaciones similares como :
 - Áreas de cocina personal en tiendas, oficinas y otros entornos de trabajo;
 - Casas de la granja y por los clientes en hoteles, moteles y otros entornos de tipo residencial;
 - Alojamiento y entornos de tipo de desayuno;
 - Catering y aplicaciones no minoristas similares.
- 11) No guarde sustancias explosivas , tales como latas de aerosol con un propelente inflamable en este aparato.



ES PELIGROSO PARA CUALQUIER PERSONA QUE NO SEA EL PERSONAL DE SERVICIO AUTORIZADO REALIZAR EL SERVICIO DE REPARACIONES QUE IMPLICAN LA EXTRACCIÓN DE PUERTAS.



PARA EVITAR EL RIESGO DE UNA DESCARGA ELÉCTRICA NO INTENTE REPARAR ESTE EQUIPO USTED MISMO.

2. INSTALACION

2.1 Ubicación


Al seleccionar una posición para la unidad que debe asegurarse de que el suelo es plano y firme, y la habitación esté bien ventilada. Evite colocar la unidad cerca de una fuente de calor, por ejemplo, cocina, calentador o radiador. También evitar la luz solar directa, ya que puede aumentar el consumo eléctrico. El ambiente de frío extremo también puede hacer que la unidad no funcione correctamente. Esta unidad no está diseñada para su uso en un garaje o instalación al aire libre. No cubra la unidad con cualquier cubierta.

Al instalar la unidad, asegúrese de que 10 cm de espacio libre queda en ambos lados, 10 cm en la parte trasera y 30 cm en la parte superior de la unidad. Esto permitirá que el aire frío circule alrededor del refrigerador y mejorar la eficiencia del proceso de enfriamiento.


2.2 La inversión de la oscilación de las puertas

Herramientas necesarias: Destornillador Plano estilo / Piso / Llave hexagonal

- 1) Retire la cubierta superior derecha.

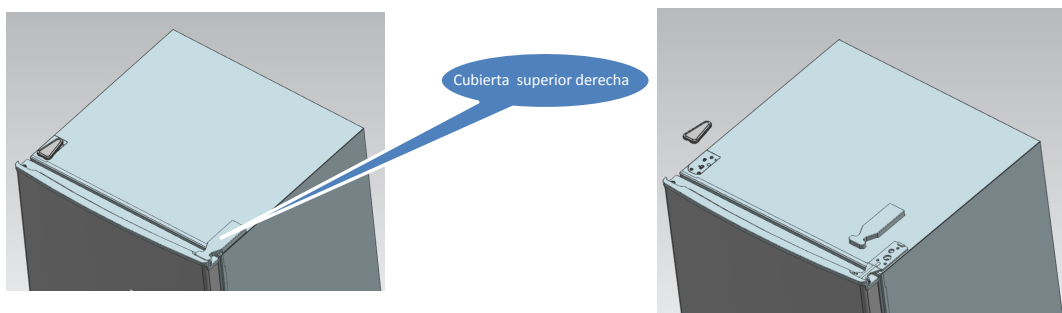


- 2) Quite los tornillos fijen la bisagra superior con un destornillador ranura en cruz

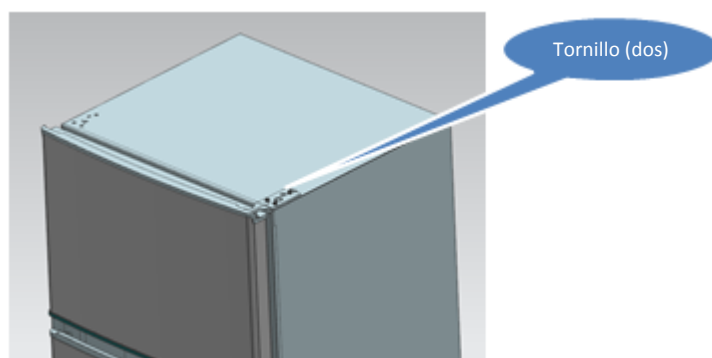


- 3) Vuelva a colocar la bisagra superior y el bloque de límite superior de puerta y el casquillo de cojinete de la puerta del otro lado.


A. Quite la tuerca con la arandela, luego retire los ejes hasta el otro

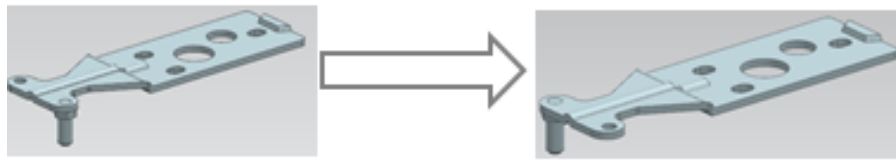


B. Retire el bloque de puerta

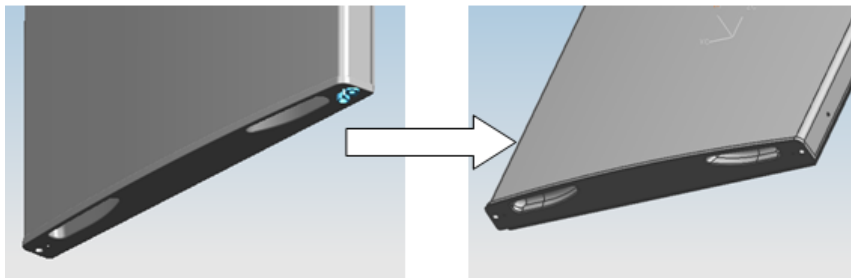

C. Por favor, sacando otro bloque de puerta, con el tornillo de montaje a la puerta

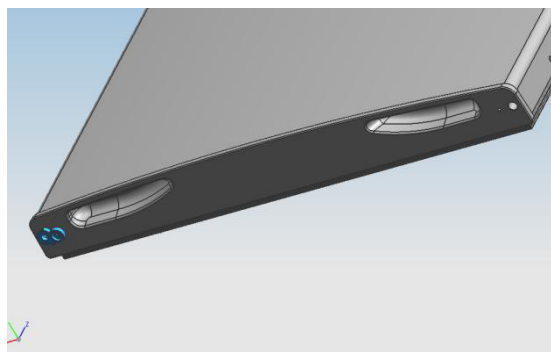


- 4) Desmonte los tornillos fijan la parte inferior de la bisagra con el destornillador de estrella ranura.

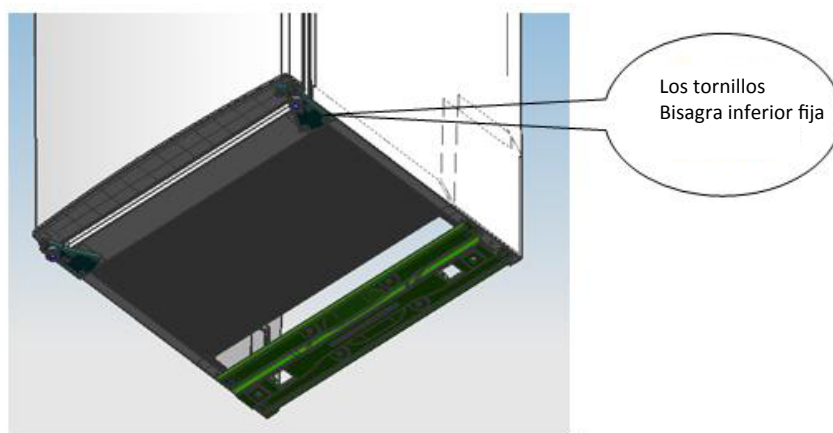


Nota: el ángulo de inclinación del refrigerador- congelador menos 45 °.

- 5) Vuelva a colocar la puerta del casquillo de cojinete inferior y el bloque de límite.

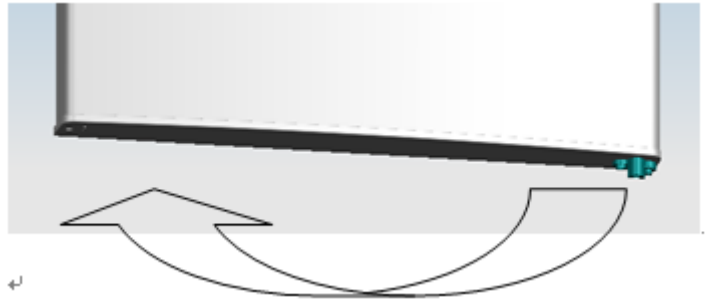


- 6) Vuelva a colocar la bisagra inferior hacia el otro lado y luego fijarlo con tornillos.

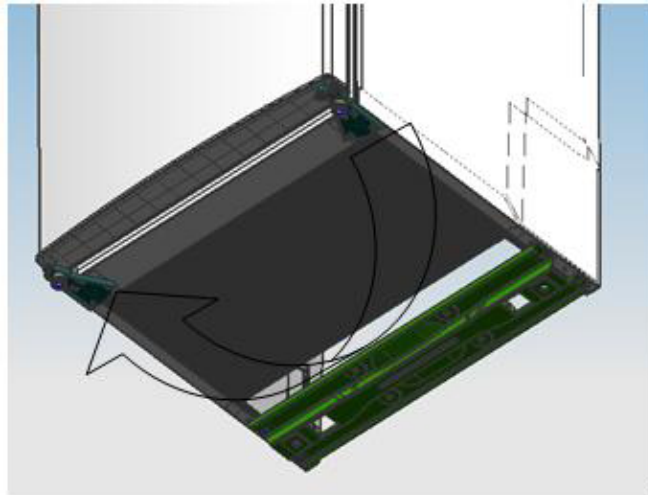


- 7) Vuelva a colocar la mitad de la bisagra.




- 8) Ajuste la posición de la derecha inferior de la puerta , fijar la mitad de bisagra.

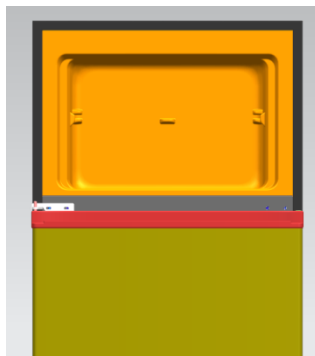

9) Vuelva a colocar la bisagra superior.

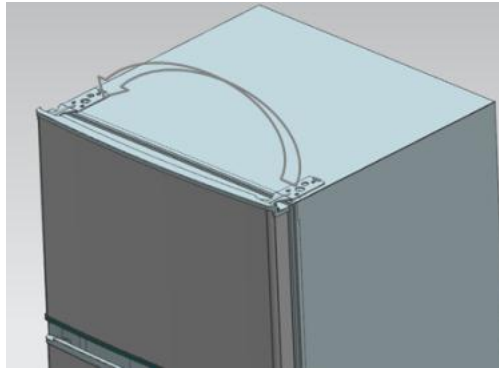


10) Ajuste la posición de la parte superior derecha de la puerta , fijar la bisagra superior y la cubierta .

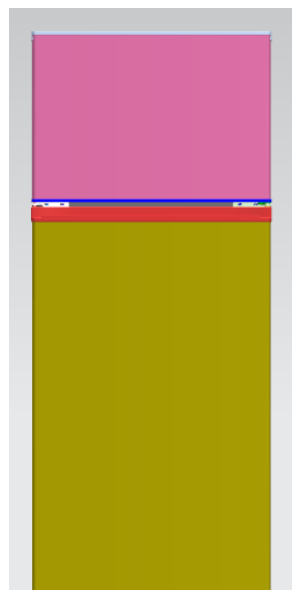

11) Coloque los cuatro tapones de rosca y dos capturas a la posición correspondiente .


- Asegúrese de que el aparato esté desconectado y vacío.
- Ajuste las dos patas niveladoras a su posición más alta.
- Recomendamos que alguien que le ayude

12) reemplazará el nivelador hacia el otro lado y ajustarlo a asegurarse de que el nivel de gabinete .

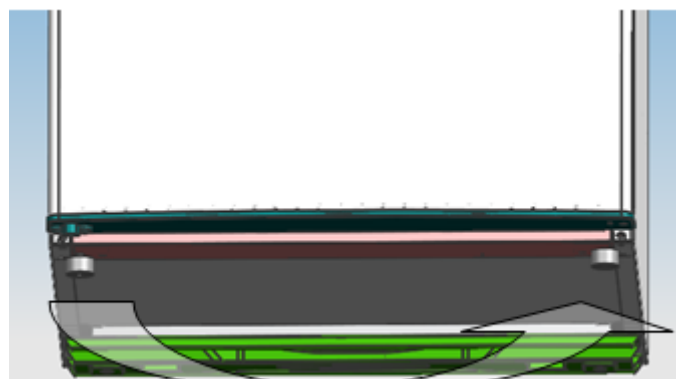

2.3 Requisitos de espacio

La puerta de la unidad debe ser capaz de abrir en su totalidad como se muestra. $W \times D \geq 902 \times 1052\text{mm}$

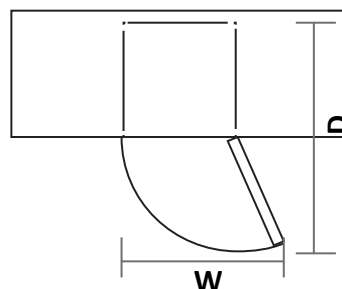


2.4 Nivelación de la Unidad

Para hacer esto ajustar las dos patas niveladoras en la parte delantera de la unidad. Si la unidad no está nivelada, la puerta y las alineaciones de sello magnético no serán cubiertas adecuadamente.

Asegúrese de que el pie toca el suelo antes de su uso.

Mira hacia abajo desde la parte superior, en sentido horario y anti horario aflojarlo, apretarlo.

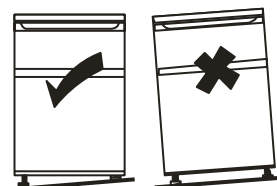

2.5 Limpieza Antes de Uso

Limpie el interior de la unidad con una solución diluida de bicarbonato de soda. Luego enjuague con agua tibia. Limpie el exterior de la unidad con un paño húmedo. Si necesita más información consulte la sección de limpieza.

2.6 Antes de usar la unidad

No dañe el cable de alimentación en cualquier condición con el fin de garantizar la seguridad de uso, no lo utilice cuando el cable esté dañado o el enchufe está desgastado.

No coloque objetos inflamables, explosivos, volátiles y altamente corrosivos en el refrigerador para evitar que daños en los accidentes de productos o de incendios.

Do not place flammable items near the refrigerator avoid fires.

No coloque objetos inflamables cerca del refrigerador para evitar incendios.

Este producto es refrigeradores domésticos y será sólo es adecuado para el almacenamiento de alimentos.

De acuerdo con las normas nacionales, los refrigeradores domésticos no deben ser utilizados para otros fines, tales como el almacenamiento de sangre, medicamentos o productos biológicos.

No coloque objetos como contenedores embotellada o sellado de fluido, tal como cervezas embotelladas y bebidas en el congelador para evitar explosiones y otras pérdidas.

Antes de colocar cualquier alimento en su unidad, encenderlo y esperar 24 horas, para asegurarse de que está trabajando correctamente y para permitir que se caiga a la temperatura correcta. Su unidad no debe ser sobrecargada.



◆ **Antes de enchufar**

Usted debe comprobar que tiene un enchufe que sea compatible con el enchufe suministrado con la unidad

◆ **Antes de encender!**

No encienda hasta dos horas después de mover la unidad

2.7 Accesorios interiores


Varios estantes de vidrio o de plástico de almacenamiento se incluyen con el aparato – según los modelos hay diferentes combinaciones.

Usted siempre debe deslizar los estantes de almacenamiento de vidrio en el conjunto debajo de las guías, por encima de los contenedores de frutas y verduras, y mantenerlo en esta posición. Para ello esto, tire de la plataforma de almacenamiento hacia adelante hasta que se puede girar hacia arriba o hacia abajo. Por favor, hagan lo mismo a la inversa para insertar la plataforma a una altura diferente.



Con el fin de aprovechar al máximo el volumen del compartimento de alimentos frescos y compartimento de conservación de alimentos congelados, el usuario puede eliminar uno o más estantes, cajones, fuera del aparato de acuerdo con su uso diario

3. APARIENCIA DEL PRODUCTO

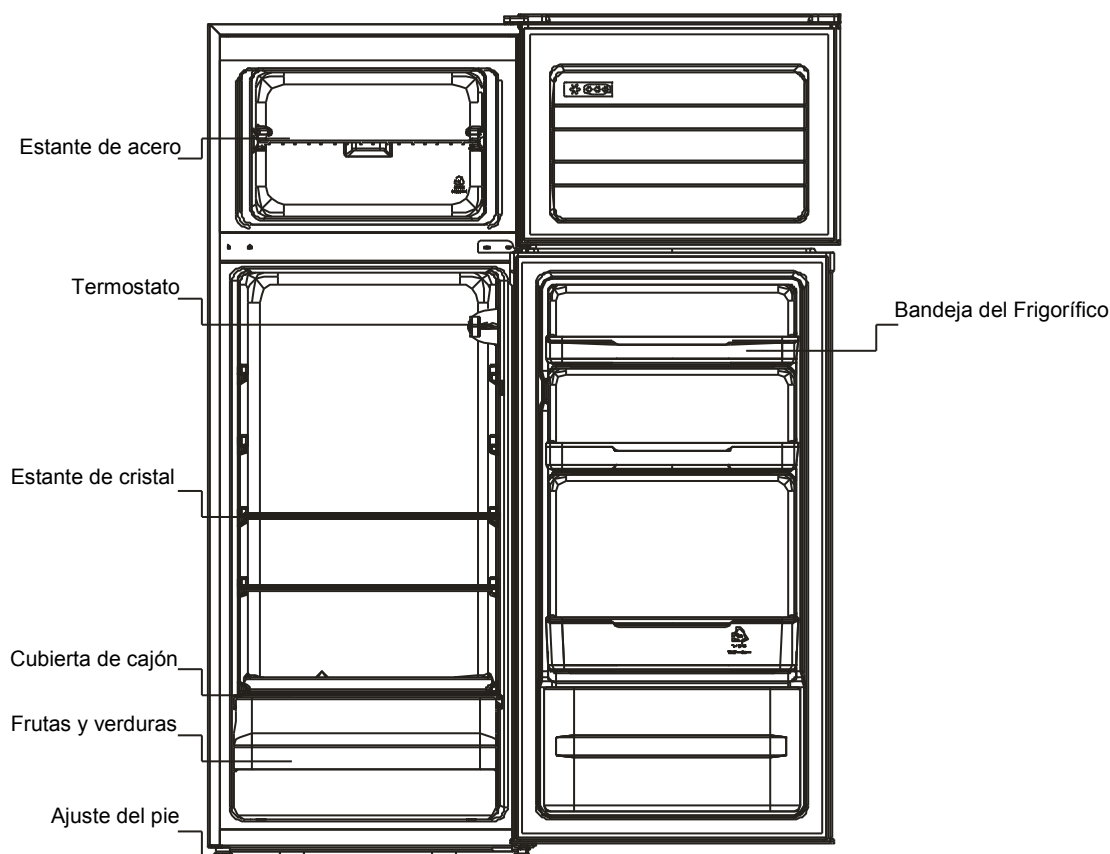

4. FUNCIONAMIENTO

4.1 Puesta en funcionamiento la Unidad

El mando selector de temperatura está situado en la pared lateral derecha del interior del refrigerador

Pared del interior del refrigerador

Configuración Off : Unidad Apagada (Unit Off)

Configuración Min : Menos Frío de Temperatura

Ajuste Med: Funcionamiento normal (adecuado para la mayoría de las situaciones)

Ajuste Max: Coolest Temperature (Frio Maximo)

Durante la alta temperatura ambiente, por ejemplo, en los días calurosos de verano. Puede ser necesario ajustar el termostato a la temperatura más fría sea (posición máxima). Esto puede hacer que el compresor funciona continuamente con el fin de mantener una temperatura baja en el armario

◆ Para la primera vez que instale su refrigerador, ajuste el mando del termostato en " Med ".

Deje que su refrigerador se enfríe por completo antes de agregar alimentos. Es el mejor que esperar

24 horas antes de introducir los alimentos. El mando del termostato controla la temperatura. . Cuando la perilla de control del termostato está ajustado en OFF, el refrigerador no va a enfriar. Asegúrese de que el pie toca el suelo

4.2 Ruido interior de la unidad !

Usted puede notar que su unidad hace ruidos inusuales. La mayoría de ellos son perfectamente normales, pero usted debe ser consciente de ellos. Estos ruidos son causados por la circulación del líquido refrigerante en el sistema de refrigeración. Tiene que llegar a ser más pronunciada desde la introducción de los gases CFC libres. Esto no es un fallo y no afecta el rendimiento de la unidad. Este es el trabajo del motor del compresor, ya que bombea el refrigerante alrededor del sistema.

4.3 Consejos para mantener los alimentos en la Unidad

- ◆ cocinados carnes / pescados siempre se deben guardar en un estante encima de las carnes crudas / peces para evitar transferencia bacteriana. Mantenga las carnes crudas / peces en un recipiente lo suficientemente grande como para recoger los jugos y se cubre adecuadamente. Coloque el recipiente en el estante más bajo.
- ◆ Deje espacio alrededor de la comida, para permitir que el aire circule dentro de la unidad. Asegúrese de que todas las partes de la unidad se mantienen frescas.
- ◆ Para evitar la transferencia de olores y deshidratación, los paquetes deben de cubrir la comida por separado. Las frutas y verduras no necesitan ser envueltas
- ◆ Siempre deje que sus alimentos pre cocidos se enfríen antes de ponerlos en la unidad. Esto ayudará a mantener la temperatura interna de la unidad.
- ◆ Para evitar que el aire frío se escape de la unidad, trate de limitar el número de veces que se abre la puerta. Le recomendamos que sólo abra la puerta cuando sea necesario para poner la comida o tomar alimentos

4.4 Cambiar la bombilla

Reemplazo de la lámpara por profesionales

5. LIMPIEZA

5.1 Descongelación

Auto - descongelación para refrigerador sin escarcha

5.2 Limpieza del interior y el exterior de la unidad

- ◆ Retire todos los estantes y la papelería ensalada. Para quitar la bandeja de ensalada de primero retirar la capa inferior estante de la puerta
- ◆ Limpie el interior de la unidad con una solución diluida de bicarbonato de sodio y luego enjuague con agua tibia con una esponja o paño " exprimida " . Seque completamente antes de cambiar los estantes
- ◆ Use un paño húmedo para limpiar el exterior y a continuación, limpie con un pulimento de los muebles. Asegúrese de que la puerta esté cerrada para evitar que se desgaste el sello de la puerta magnética y en el interior la unidad
- ◆ La rejilla del condensador en la parte posterior de la unidad y los componentes adyacentes se pueden limpiar usando una aspiradora o un cepillo suave.

5.3 Consejos de limpieza

La condensación puede aparecer en el exterior de la unidad. Esto puede ser debido a un cambio en la habitación temperatura. Limpiar cualquier residuo de la humedad. Si el problema persiste, póngase en contacto con un cualificado técnico para obtener asistencia.

6. MANTENIMIENTO

6.1 Cambio de la luz interna

Reemplazo de la lámpara por profesionales.

6.2 Cuidado al manipular / Moviendo su Unidad

Sujete la unidad en torno a los lados o en la base cuando lo mueva. Bajo ningún concepto debe ser levantada manteniendo los bordes de la superficie superior

6.3 Servicio

La unidad debe ser reparada por un técnico autorizado y sólo deben de ser utilizadas piezas de repuesto originales. Bajo ninguna circunstancia debe intentar reparar la unidad por sí mismo. Las reparaciones llevadas a cabo por personas inexpertas pueden provocar daños irreparables o un mal funcionamiento. Póngase en contacto con un técnico cualificado.

6.4 Conmutación De por largos períodos de tiempo

Cuando la unidad no está en uso durante un largo período de tiempo , desconéctelo de la red eléctrica , vacíe todos los alimentos y limpie el aparato , dejando la puerta entreabierta para evitar olores desagradables.

7. Solución de problemas

Los siguientes problemas simples pueden ser manipulados por el usuario. Por favor, llame al Departamento de servicio post- venta si los problemas no se resuelven.

No Funciona	Si el congelador está enchufado y conectado a la alimentación; Baja tensión ; El incumplimiento o la potencia de circuito de disparo
Olor	Alimentos olorosos deben estrechamente envuelto; Si los alimentos están podridos ; Ya sea que se debe limpiar el interior.
El funcionamiento a largo plazo del compresor	Es normal que el refrigerador opera durante más tiempo en verano, cuando la temperatura ambiente es más alta ; No poner demasiada comida en el congelador de una sola vez ; No coloque los alimentos hasta que se enfrían ; Apertura frecuente de la puerta del refrigerador.
No tiene luz	Ya sea que el refrigerador esté conectado a la alimentación si la luz que ilumina está dañado.
La puerta del refrigerador no puede estar debidamente cerrado .	La puerta del congelador se ha quedado atascado por los paquetes de alimentos ; Demasiada comida ; Incline el refrigerador .
Los ruidos fuertes	Si el alimento está nivelado, si el refrigerador es equilibrado; Si las partes del refrigerador se colocan correctamente.

7.1 Caliente las extremidades

- ◆ El recinto refrigerador puede emitir calor durante el funcionamiento, especialmente en verano, esto es causado por la radiación del condensador, y es un fenómeno normal .
- ◆ Condensación: fenómeno de condensación será detectado en la superficie exterior y la puerta sellos del congelador cuando la humedad ambiental es grande, este es un fenómeno normal, y el condensación se puede limpiar con una toalla seca.
- ◆ Zumbido: zumbido se genera ejecutando compresor especialmente al poner en marcha o apagar

8. CONSEJOS PARA AHORRO DE ENERGÍA

Trate de no abrir la puerta con demasiada frecuencia, especialmente cuando el clima es húmedo y caliente. Una vez que abra la puerta, cerrarla tan pronto como sea posible.

De vez en cuando comprobar si el aparato está suficientemente ventilado (circulación de aire adecuada detrás del aparato). En condiciones normales de temperatura, debe tramitar el termostato a la posición media

Antes de cargar el aparato con paquetes de alimentos frescos, asegúrese de que se enfrían a la temperatura ambiente temperatura.

El hielo y la helada capa de aumento del consumo de energía, por lo que limpiar el aparato tan pronto como la capa sea de 3-5 mm de espesor. Si es el condensador es exterior, la pared posterior debe de estar siempre limpia libre de polvo o cualquier impurezas.

- ◆ El aparato debe estar situado en la zona más fría de la habitación, lejos del calor que produce aparatos o conductos de calefacción, y fuera de la luz directa del sol.
- ◆ Deje que los alimentos calientes se enfríen a temperatura ambiente antes de colocarlos en el aparato. La sobrecarga del aparato hace que el compresor funcione durante más tiempo. Los alimentos que se congelan lentamente pueden perder calidad o echarse a perder
- ◆ Asegúrese de envolver adecuadamente los alimentos y seque los envases antes de colocarlos en el aparato. Esto reduce la acumulación de escarcha en el interior del aparato.
- ◆ Compartimiento de almacenaje, no debemos de forrarlo con papel de aluminio, papel de cera o toallas de papel. Los forros interfieren con la circulación de aire frío, por lo que el aparato sea menos eficiente.
- ◆ Organice y etiquete los alimentos para reducir la apertura de la puerta y las búsquedas prolongadas. Quite la mayor cantidad artículos como necesite de una sola vez y cierre la puerta tan pronto como sea posible .

9. ELIMINACIÓN

Los aparatos usados aún tienen algo de valor residual. Un método ecológico de su eliminación garantizar que las materias primas de valor pueden ser recuperados y utilizados de nuevo. El refrigerante utilizado en sus materiales de la unidad y de aislamiento requiere procedimiento especial de destrucción. Asegúrese de que ninguno de los tubos en la parte posterior de la unidad están dañados antes de su eliminación. Solicite información actualizada sobre las opciones de la eliminación de su viejo aparato y el embalaje de la nueva, la puede obtener de su distribuidor local o oficina del Ayuntamiento.. Cuando se deshaga de una ruptura unidad antigua de cualquier bloqueo o cerrojos antiguos y retire la puerta como un salvaguardar.

Eliminación correcta de este producto	
	Esta marca indica que este producto no debe desecharse con otros desechos de los hogares en toda la UE. Para evitar los posibles daños al medio ambiente o a la salud humana que representa la eliminación incontrolada de residuos, reciclar de forma responsable para promover la reutilización sostenible de recursos materiales. Para devolver su dispositivo usado, por favor utilice los sistemas de devolución y recogida o póngase en contacto con el establecimiento donde el producto ha sido comprado. Ellos pueden tomar este producto para el reciclado seguro ambiental. Para obtener más información, póngase en contacto con la autoridad local o con el distribuidor que le vendió el producto




EN

REFRIGERADOR

Con Congelador Superior

MANUAL DE USUARIO



POR FAVOR LEA CON ATENCIÓN
ESTE MANUAL ANTES DE USAR EL
APARATO, PARA ASEGURAR UN
CORRECTO FUNCIONAMIENTO Y
GUÁRDELO PARA FUTURAS
CONSULTAS

versión:001

MODELO: MDRT294FGG01

www.midea.com

Contents

1.	SAFETY WARNINGS.....	1-2
2.	INSTALLTION.....	3
2.1	Location.....	3
2.2	Reversing the Door Swing	3
2.3	Door Handle Install Illumination (optional)	7
2.4	Door Space Requirements.....	8
2.5	Levelling the Unit	8
2.6	Cleaning Before Use	8
2.7	Before Using Your Unit.....	8
2.8	Interior Accessories	9
3.	PRODUCT OVERVIEW	9
4.	OPERATION.....	10
4.1	Switching On Your Unit	10
4.2	Noise Inside the Unit!.....	10
4.3	Tips for Keeping Food in the Unit.....	10
4.4	Change the Light Bulb	10
5.	CLEANING	11
5.1	Defrosting.....	11
5.2	Cleaning the Interior and the Exterior of the Unit	11
5.3	Cleaning Tips	12
6.	MAINTENANCE	12
6.1	Changing the Internal Light	12
6.2	Care When Handling / Moving Your Unit.....	12
6.3	Servicing	12
6.4	Switching Of for Long Periods of Time	12
7.	Trouble shooting	12
7.1	Warm tips:.....	13
8.	TIPS FOR ENERGY SAVING	13
9.	DISPOSAL	14

1. SAFETY WARNINGS



Warning: risk of fire / flammable materials

THIS appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.

THIS appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.)

Children should be supervised to ensure that they do not play with the appliance.

IF the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

DO not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

THE appliance has to be unplugged after use and before carrying out user maintenance on the appliance.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

WARNING: Please abandon the refrigerator according to local regulators for its use of flammable blowing gas and refrigerant.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

DO not use extension cords or ungrounded (two prong) adapters.

DANGER: Risk of child entrapment. Before you throw away your old refrigerator or freezer:

-Take off the doors.

-Leave the shelves in place so that children may not easily climb inside.

THE refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessory.

REFRIGERANT and cyclopentane foaming material used for the appliance are

flammable. Therefore, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.

FOR EN standard: This appliance can be used by children aged from 8 years and above and persons with reduce physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

The necessity that, for doors or lids fitted with locks and keys, the keys be kept out of the reach of children and not in the vicinity of the refrigerating appliance, in order to prevent children from being locked inside.

TO avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days. (note 1)
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes. (note 2)
- One -, two- and three-star compartments are not suitable for the freezing of fresh food. (note 3) .
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- For appliances without a 4-star compartment: this refrigerating appliance is not suitable for freezing foodstuffs. (note 4)

Note 1,2,3,4: Please confirm whether it is applicable according to your product compartment type.

FOR a freestanding appliance: this refrigerating appliance is not intended to be used as a built-in appliance.

ANY replacement or maintenance of the LED lamps is intended to be made by the manufacturer, its service agent or similar qualified person.

2. INSTALLTION

2.1 Location


When selecting a position for your unit you should make sure the floor is flat and firm, and the room is well ventilated. Avoid locating your unit near a heat source, e.g. cooker, boiler or radiator. Also avoid direct sunlight as it may increase the electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly. This unit is not designed for use in a garage or outdoor installation. Do not drape the unit with any covering.

When installing the unit, ensure that 10 cm of free space is left at both sides, 10 cm at the rear and 30 cm at the top of the unit. This will allow cold air to circulate around the wine cooler and improve the efficiency of the cooling process.


2.2 Reversing the Door Swing (optionnal)

Tools Required: Phillips style screwdriver / Flat blated screwdriver / Hexagonal spanner

- 1) Remove the top hinge cover .

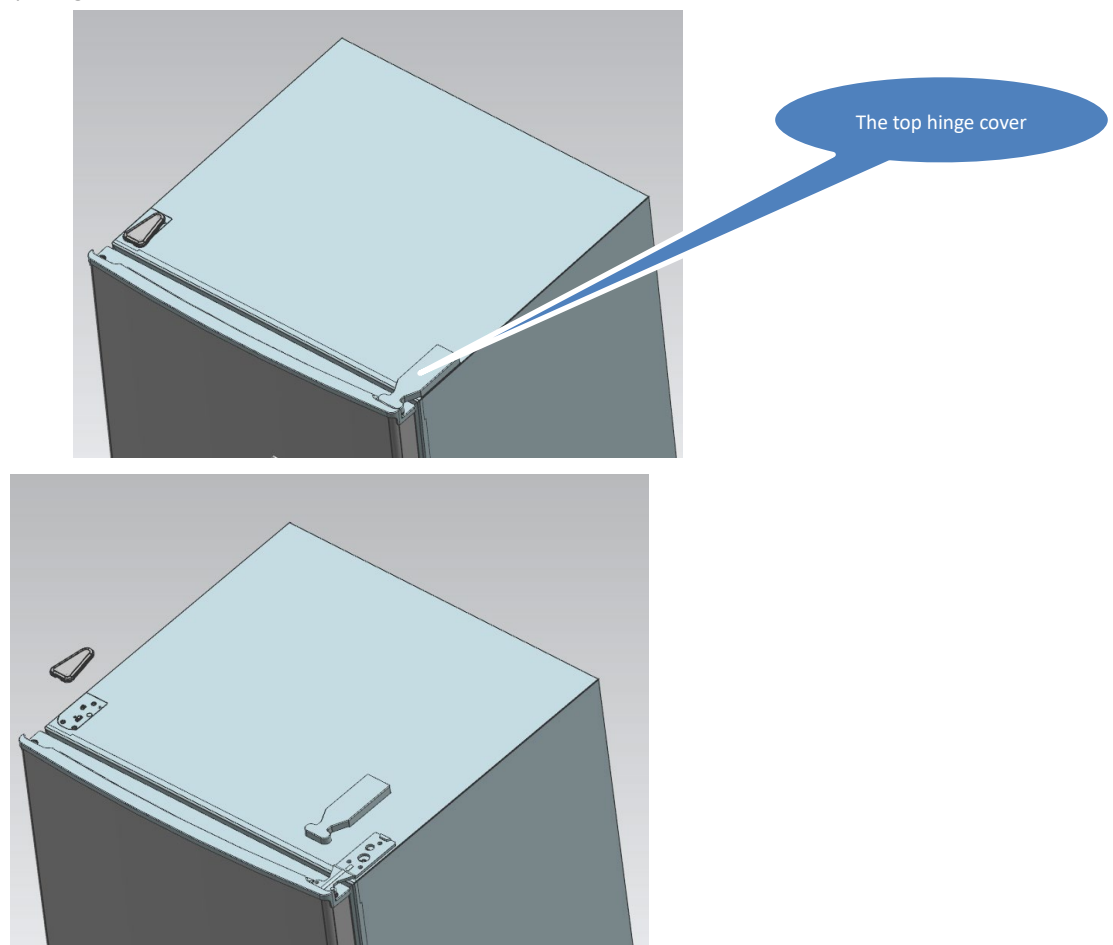


- 2) Remove the screws fixed the top-hinge with cross-slot screwdriver.

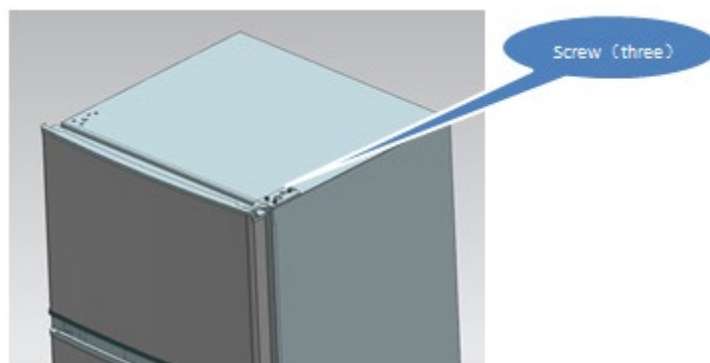


- 3) Replace the top-hinge and the top-door limit block and the door bearing bush to the other side.


- A. Remove the nut with sleeve. Take off the washer then remove the axes to the other side and fixed.

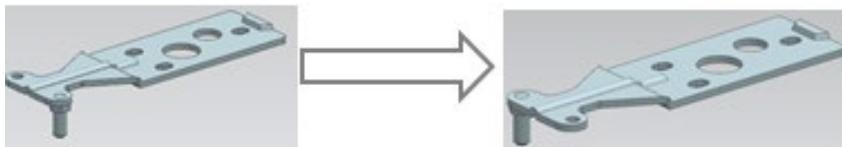


- B. Remove the door limit block

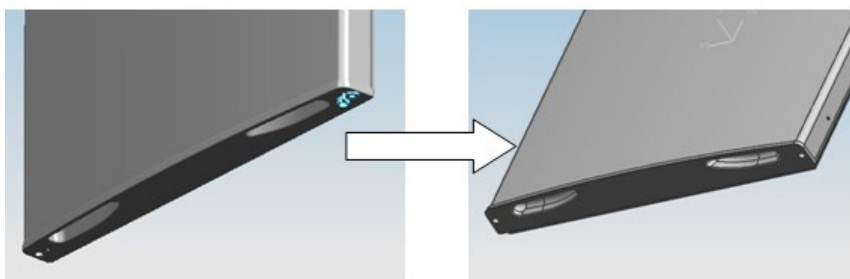

- C. Please taking out another door limit block, with screw mounting to the door

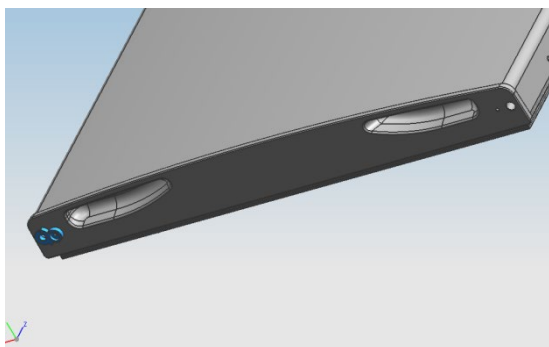


- 4) Disassemble the screws fixed the bottom-hinge with cross-slot screwdriver .

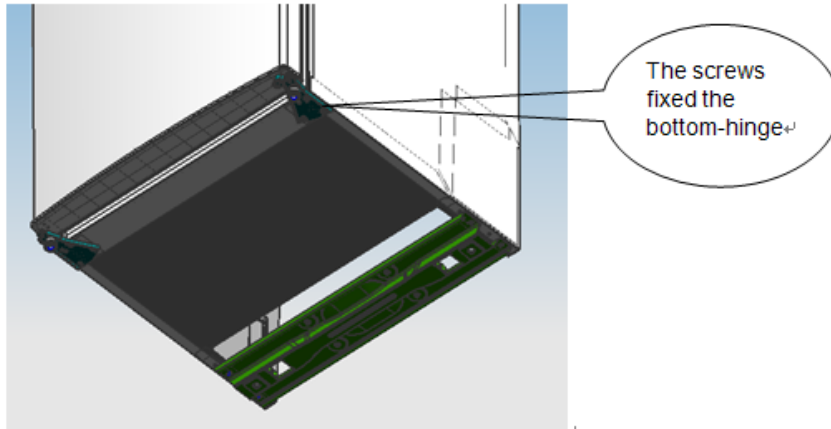


Note: the refrigerator-freezer incline angle less 45° .

- 5) Replace the bottom door bearing bush and the limit block.

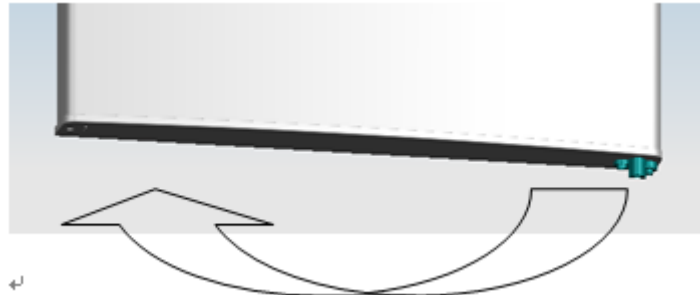

- 6) Replace the bottom hinge to the other side then fix it with screws.

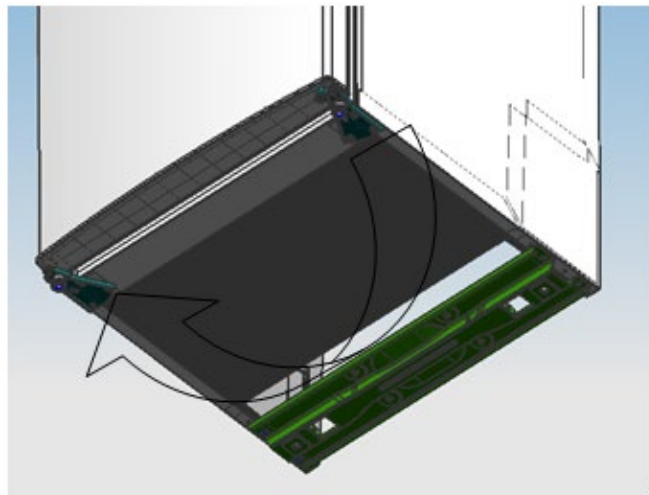


- 7) Replace the mid-hinge.




8) Set the bottom door right position,fix the mid-hinge.



9) Replace the top-hinge.

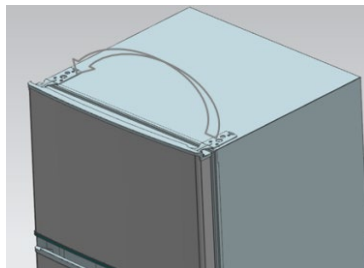


10) Set the top door right position,fix the top-hinge and the cover.

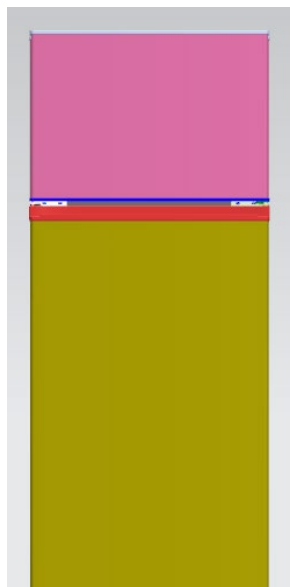

11) Install the four screw caps and two catches to corresponding position.

- Ensure the Appliance is unplugged and empty.
- Adjust the two leveling feet to their highest position.
- We recommend you have someone to assist you.

12) replace the leveler to the other side and adjust it to make sure the cabinet level.

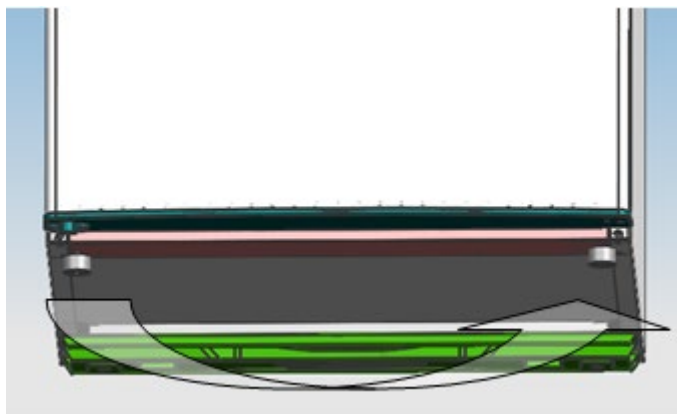

*The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor



2.3 Door Handle Install Illumination (optional)

Note: Figures in the user manual are only for reference. The actual product may differ slightly. The refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessory.

Step 1: take out two plug pins from the door (Side of door open)



Step 2: Install the door handle to the door and fasten it with screws

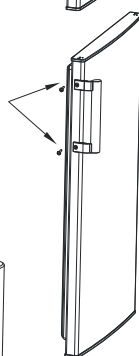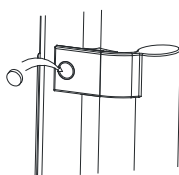

Step 3: Cover screw caps of the handle into screw holes




*The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor

2.4 Door Space Requirements

The unit's door must be able to open fully as shown.

$W \times D \geq 902 \times 1052\text{mm}$

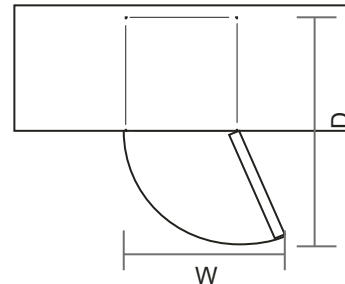


2.5 Levelling the Unit

To do this adjust the two levelling feet at the front of the unit.

If the unit is not level, the door and magnetic seal alignments will not be covered properly.

Make sure that the foot touches the ground before use.

Look down from the top, clockwise and counterclockwise loosening, tightening.

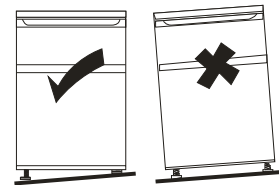

2.6 Cleaning Before Use

Wipe the inside of the unit with a weak solution of bicarbonate soda. Then rinse with warm water using a 'Wrung-out' sponge or cloth. Wash the shelves and salad bin in warm soapy water and dry completely before replacing in the unit. Clean the exterior of the unit with a damp cloth.

If you require more information refer to the Cleaning section.

2.7 Before Using Your Unit

Do not damage the power cord under any condition so as to ensure safety use, do not use when the power cord is damaged or the plug is worn.

Do not put flammable, explosive, volatile and highly corrosive items in the refrigerator to prevent damages to the product or fire accidents.

Do not place flammable items near the refrigerator to avoid fires.

This product is household refrigerators and shall be only suitable for the storage of foods. According to national standards, household refrigerators shall not be used for other purposes, such as storage of blood, drugs or biological products.

Do not place items such as bottled or sealed container of fluid such as bottled beers and beverages in the freezer to prevent bursts and other losses.

Before placing any food in your unit, turn it on and wait for 24 hours, to make sure it is working properly and to allow it time to fall to the correct temperature. Your unit should not be overfilled.



◆ **Before Plugging in**

You must check that you have a socket which is compatible with the plug supplied with the unit.

◆ **Before Turning On!**

Do not turn on until two hours after moving the unit.

2.8 Interior Accessories

Various glass or plastic storage shelves are included with your appliance - different models have different combinations.


You should always slide one of the full size glass storage shelves into the lowest set of guides, above the fruit and vegetable containers, and keep it in this position. To do this, pull the storage shelf forward until it can be swivelled upwards or downwards and removed.

Please do the same in reverse to insert the shelf at a different height.



In order to make the most of the volume of the fresh food storage compartment and frozen-food storage compartment, the user can remove one or more shelves, drawers, out of the appliance, according to your daily use.

3. PRODUCT OVERVIEW

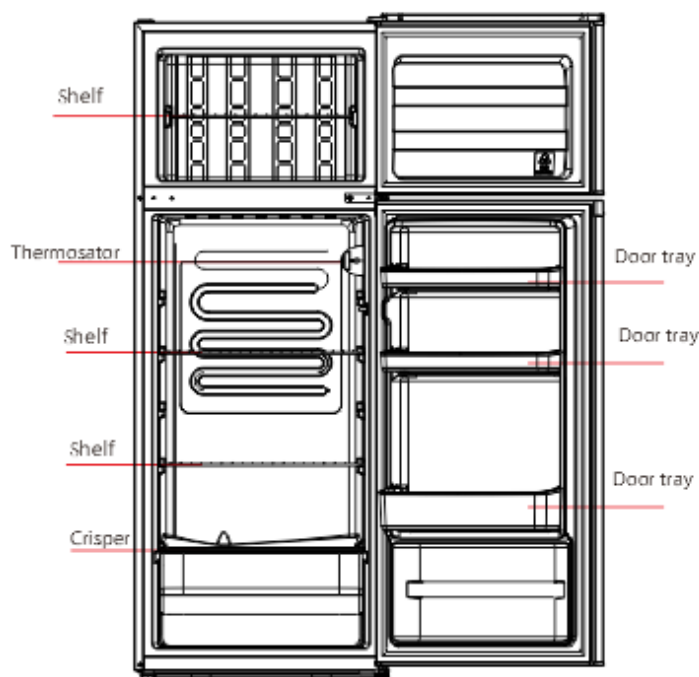

Drawers, food boxes, shelves, etc. placed according to the position in the picture above are the most energy efficient.

*The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor

4. OPERATION

4.1 Switching On Your Unit

Setting “Off”: UnitOff

Setting “Min”: Less Cool Temperature

Setting “Med” or “MID”: Normal Operation(adequate for most situations)

Setting “Max”: Coolest Temperature

◆ During high ambient temperatures e.g. on hot summer days. It may be necessary to set the thermostat to the Coolest setting(position “Max”). This may cause the compressor running continuously in order to maintain a low temperature in the cabinet.

◆ For the first time you install your refrigerator, set the thermostat knob at “Med”.

Give your refrigerator time to cool down completely before adding food. It is the best to wait 24 hours before adding food. The thermostat knob controls the temperature. When the thermostat control knob is set to OFF, the refrigerator will not be running.

4.2 Noise Inside the Unit!

You may notice that your unit makes some unusual noises. Most of these are perfectly normal, but you should be aware of them!

These noises are caused by the circulation of the refrigerant liquid in the cooling system. It has become more pronounced since the introduction of CFC free gases. This is not a fault and will not affect the performance of your unit. This is the compressor motor working, as it pumps the refrigerant around the system.

4.3 Tips for Keeping Food in the Unit

- ◆ Cooked meats/fishes should always be stored on a shelf above raw meats/fishes to avoid bacterial transfer. Keep raw meats/fishes in a container which is large enough to collect juices and cover it properly. Place the container on the lowest shelf.
- ◆ Leave space around your food, to allow air to circulate inside the unit. Ensure all parts of the unit are kept cool.
- ◆ To prevent transfer of favours and drying out, pack or cover the food separately. Fruit and vegetables do not need to be wrapped.
- ◆ Always let pre-cooked food cool down before you put in the unit. This will help to maintain the internal temperature of the unit.
- ◆ To prevent cold air escaping from the unit, try to limit the number of times you open the door. We recommend that you only open the door when you need to put food in or take food out.

4.4 Change the Light Bulb

Lamp replacement by professionals

5. CLEANING

5.1 Defrosting

NOTE THIS UNIT DOES NOT HAVE AN AUTO DEFROST SYSTEM.

Please use a plastic ice shovel when clearing the frosting of the evaporator. Do not use metal

sharp objects.

5.2 Cleaning the Interior and the Exterior of the Unit

- ◆ Dusts behind the refrigerator and on the ground shall be timely cleaned to improve the cooling effect and energy saving.
- ◆ Check the door gasket regularly to make sure there are no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.
- ◆ The interior of the refrigerator should be cleaned regularly to avoid odor.
- ◆ Please turn off the power before cleaning interior, remove all foods, drinks ,shelves, drawers, etc.
- ◆ Use a soft cloth or sponge to clean the inside of the refrigerator, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.
- ◆ For areas that are difficult to clean in the refrigerator (such as narrow sandwiches, gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. and when necessary, combined with some auxiliary tools (such as thin sticks) to ensure no contaminants or bacteria accumulation in these areas.
- ◆ Do not use soap, detergent, scrub powder, spray cleaner, etc., as these may cause odors in the interior of the refrigerator or contaminated food.
- ◆ Clean the bottle frame, shelves and drawers with a soft cloth dampened with soapy water or diluted detergent. Dry with a soft cloth or dry naturally.
- ◆ Wipe the outer surface of the refrigerator with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.
- ◆ Do not use hard brushes, clean steel balls, wire brushes, abrasives(such as toothpastes), organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items, which may damage the fridge surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.
- ◆ Do not rinse directly with water or other liquids during cleaning to avoid short circuits or affect electrical insulation after immersion.

5.3 Cleaning Tips

Condensation may appear on the outside of the unit. This may be due to a change in room temperature. Wipe of any moisture residue. If the problem continues, please contact a qualified technician for assistance.

6. MAINTENANCE

6.1 Changing the Internal Light

Lamp replacement by professionals.

6.2 Care When Handling / Moving Your Unit

Hold the unit around its sides or base when moving it. Under no circumstances should it be lifted by holding the edges of the top surface.

6.3 Servicing

The unit should be serviced by an authorized engineer and only genuine spare parts should be used. Under no circumstances should you attempt to repair the unit yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunction. Contact a qualitatively technician.

6.4 Switching Of for Long Periods of Time

When the unit is not in use for a long period of time, disconnect it from the mains supply, empty all food and clean the appliance, leaving the door ajar to prevent unpleasant smells.

7. Trouble shooting

The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not settled.

Inoperation	Whether the freezer is plugged and connected to power; Low voltage; Failure power or tripping circuit
Odor	Odorous foods should closely wrapped; Whether foods are rotten; Whether the interior shall be cleaned.
Long-term operation of compressor	It is normal that refrigerator operates for longer time in summer when the ambient temperature is higher; Do not put too much food in the freezer at one time; Do not put foods until they are cooled; Frequent opening of refrigerator door.
Illuminating light does not shine	Whether the refrigerator is connected to power, whether the illuminating light is damaged.
The refrigerator door can not be properly closed.	The freezer door is stuck by food packages; Too much food; Tilt refrigerator.
Loud noises	Whether the food is leveled, whether the refrigerator is balanced; Whether the refrigerator parts are properly placed.

7.1 Warm tips:

- ◆The refrigerator enclosure may emit heat during operation specially in summer, this is caused by the radiation of the condenser, and it is a normal phenomenon.
- ◆Condensation: condensation phenomenon will be detected on the exterior surface and door seals of the freezer when the ambient humidity is large, this is a normal phenomenon, and the condensation can be wiped away with a dry towel.
- ◆Buzz: Buzz will be generated by running compressor specially when starting up or shutting down.

8. FOR ENERGY SAVING

Warning for energy

- 1)Refrigerating appliances might not operate consistently (possibility of defrosting of contents or temperature becoming too warm in the frozen food compartment) when sited for an extended period of time below the cold end of the range of temperatures for which the refrigerating appliance is designed.
- 2)The fact that effervescent drinks should not be stored in food freezer compartments or cabinets or in low-temperature compartments or cabinets, and that some products such as water ices should not be consumed too cold;

3)The need to not exceed the storage time(s) recommended by the food manufacturers for any kind of food and particularly for commercially quick-frozen food in food-freezer and frozen-food storage compartments or cabinets;


4)The precautions necessary to prevent an undue rise in the temperature of the frozen food while defrosting the refrigerating appliance, such as wrapping the frozen food in several layers of newspaper.

5)The fact that a rise in temperature of the frozen food during manual defrosting, maintenance or cleaning could shorten the storage life.

9. DISPOSAL

Old units still have some residual value. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again. The refrigerant used in your unit and insulation materials require special disposal procedures. Ensure that none of the pipes on the back of the unit are damaged prior to disposal. Up to date information concerning options of disposing of your old unit and packaging from the new one can be obtained from your local council office.

When disposing of an old unit break of any old locks or latches and remove the door as a safeguard.

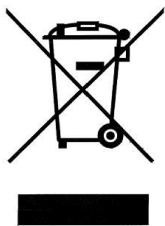Correct Disposal of this product	
	Correct Disposal of this product This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

For more information, please contact the local authority or your retailer where you purchased the product.



SIÉNTETE COMO EN TU CASA